

BAZZ AIR



- Instrucciones
- Instructions
- ▲ Instruction
- ◆ Anweisungen

LMP

LIGHTING


SUPERFÍCIE / SURFACE

1a


ASIMÉTRICO
ASYMETRIC

SIMÉTRICO
SYMMETRIC / OPAL

NOTA: VERIFICAR POSICIÓN
NOTE: CHECK POSITION

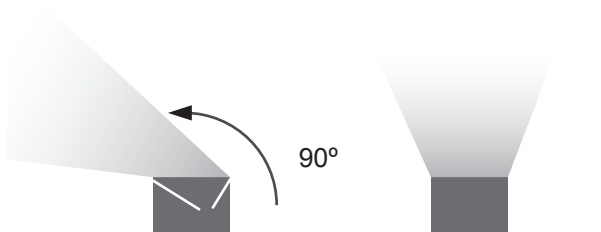




	Long	X
1M	1008	862
2M	2000	1855

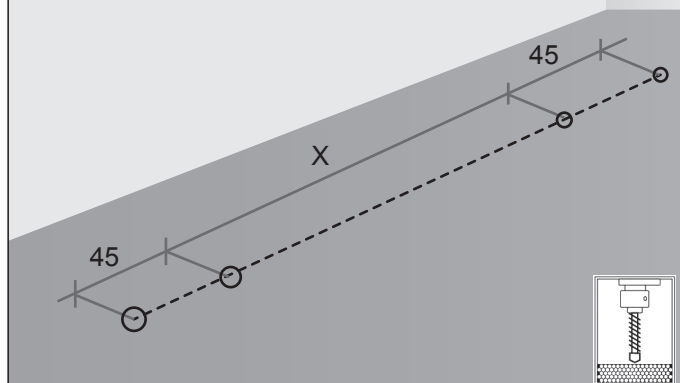

2a

3a

4a

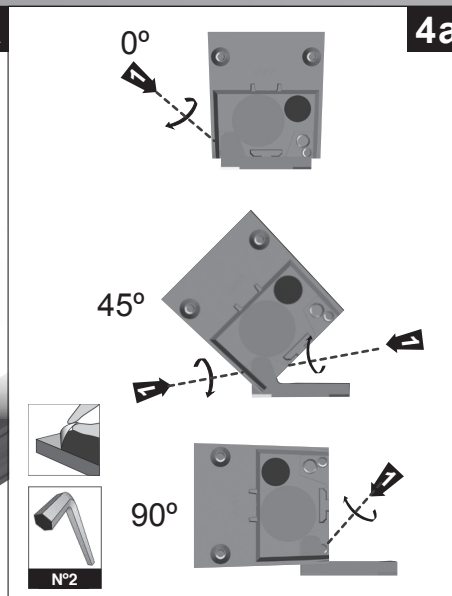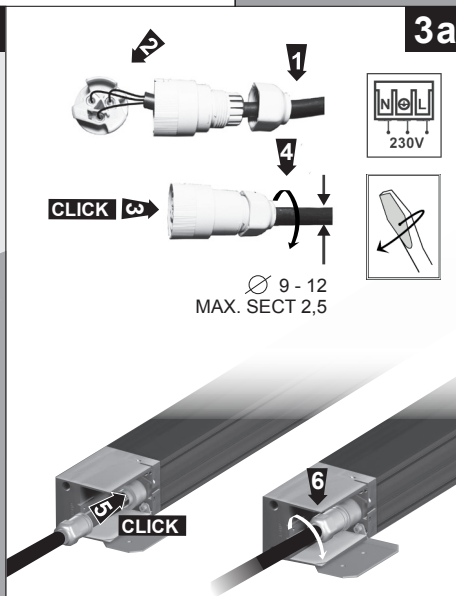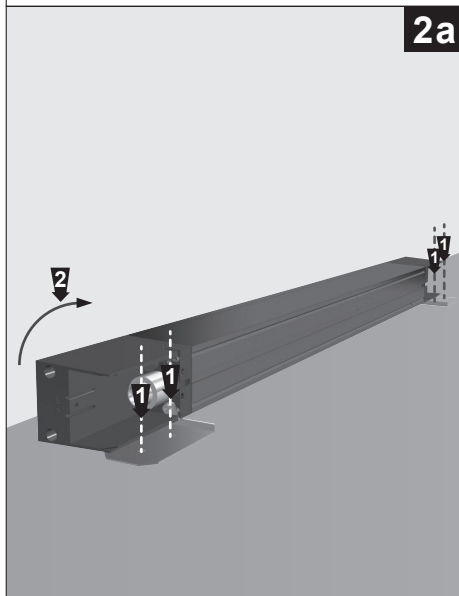



SUSPENSIÓN / SUSPENSION

1b

ASIMÉTRICO
ASYMETRIC

SIMÉTRICO
SYMMETRIC / OPAL




NOTA: VERIFICAR POSICIÓN
NOTE: CHECK POSITION

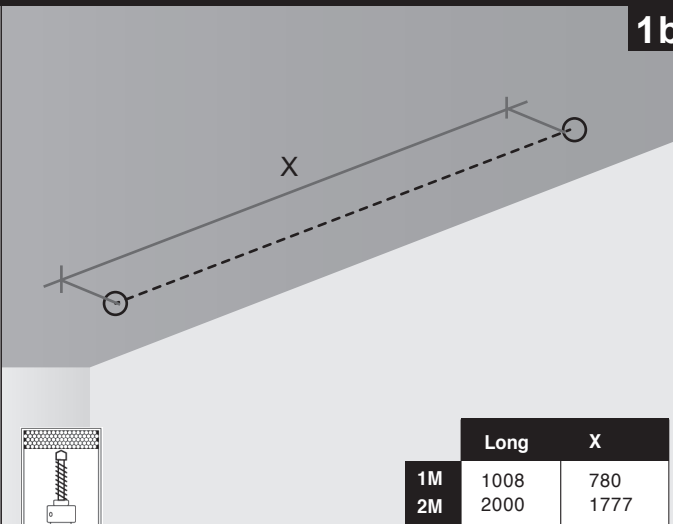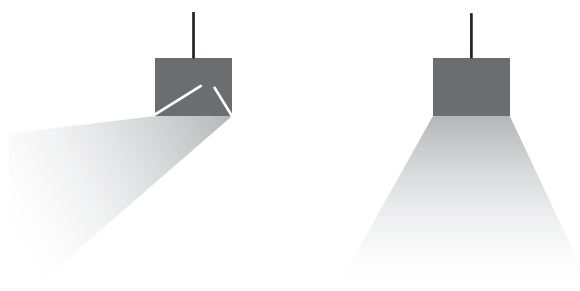

	Long	X
1M	1008	780
2M	2000	1777



Ref. 96.01.31.3
Ref. 96.01.34.3

2b

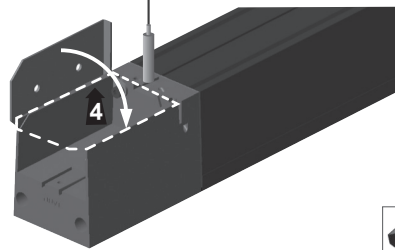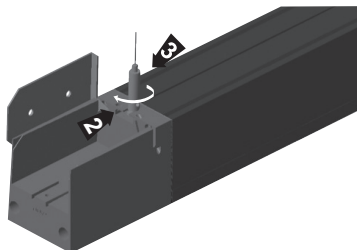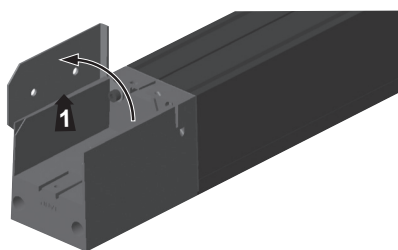


3b LUMINARIAS CONTINUAS

4b

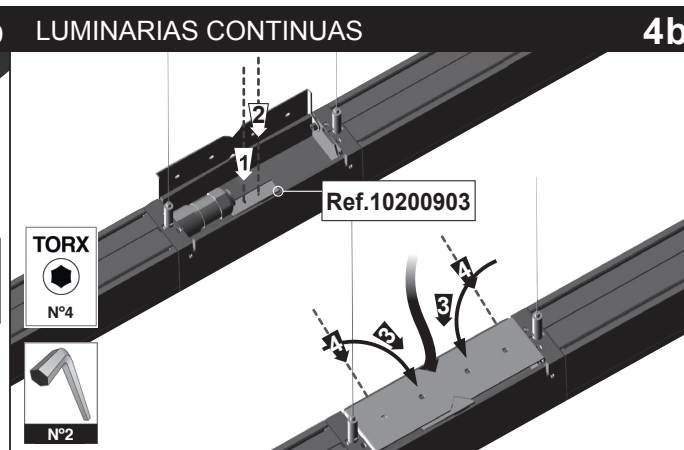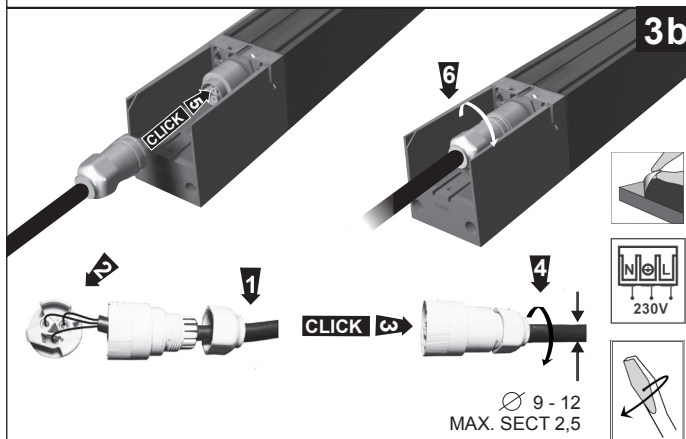


BAZZ MONOCOLOR

6a

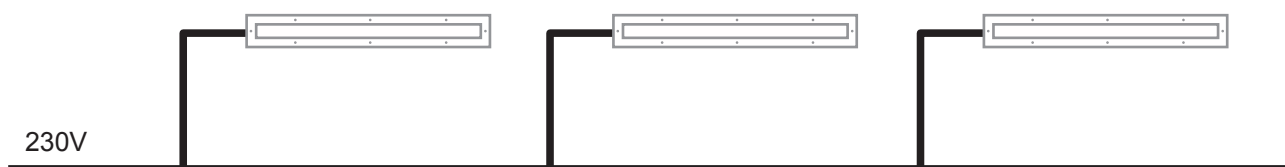

BAZZ RGB / CONEXION DMX / RDM

6b

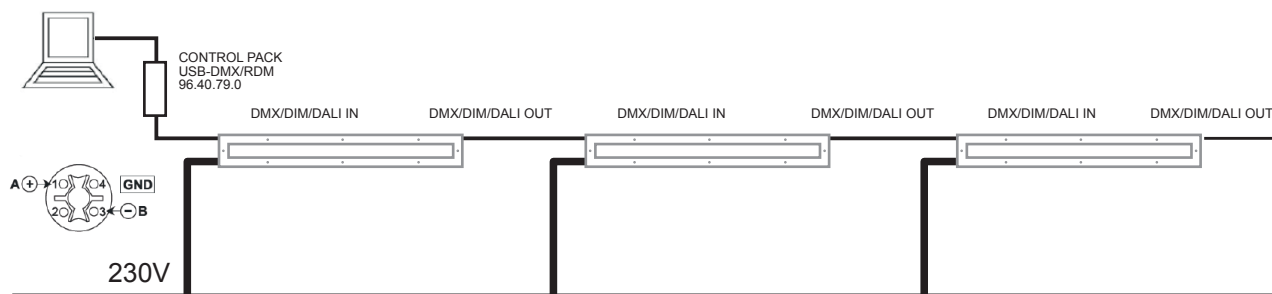

• El fabricante no asume las responsabilidades derivadas del uso y montaje incorrectos de sus productos.

■ Le fabricant n'assume pas les responsabilités dérivées de l'emploi et du montage incorrects de ses produits.

▲ The manufacturer is not responsible for the incorrect use and assembly of its products.

◆ Der Hersteller übernimmt keine Haftung für Schäden aufgrund fehlerhafter Montage oder inkorrektem Gebrauch seiner Produkte.

EL EMBALAJE DE ESTE PRODUCTO ESTÁ CONSIDERADO COMO ENVASE INDUSTRIAL, SIENDO SU RECEPTOR UN PROFESIONAL



Córdoba, 16 · 08226 Terrassa (BCN)
Tel. 902 20 40 10
Fax. 93 786 15 51
www.lamp.es · lamp@lamp.es

1003890 (C)