

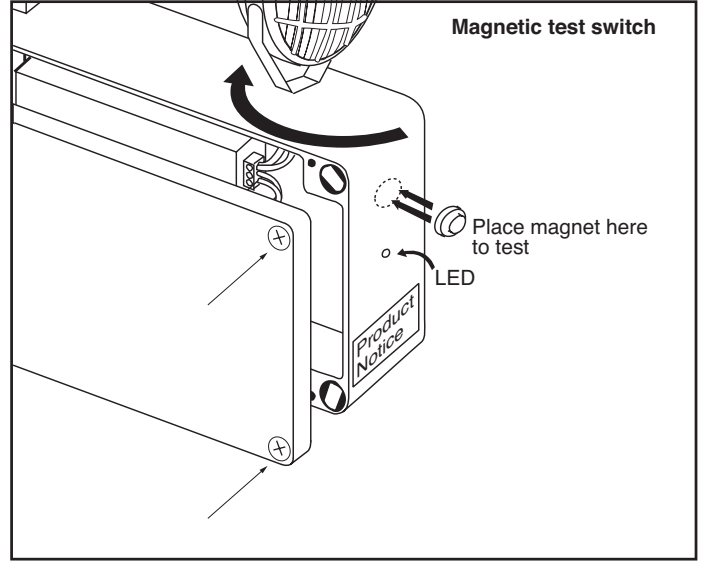
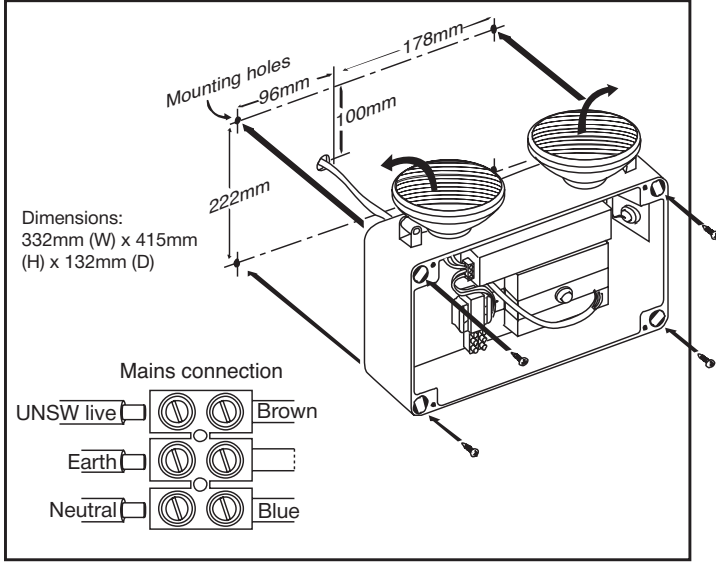


**GRP body twin head 10w floodlight**

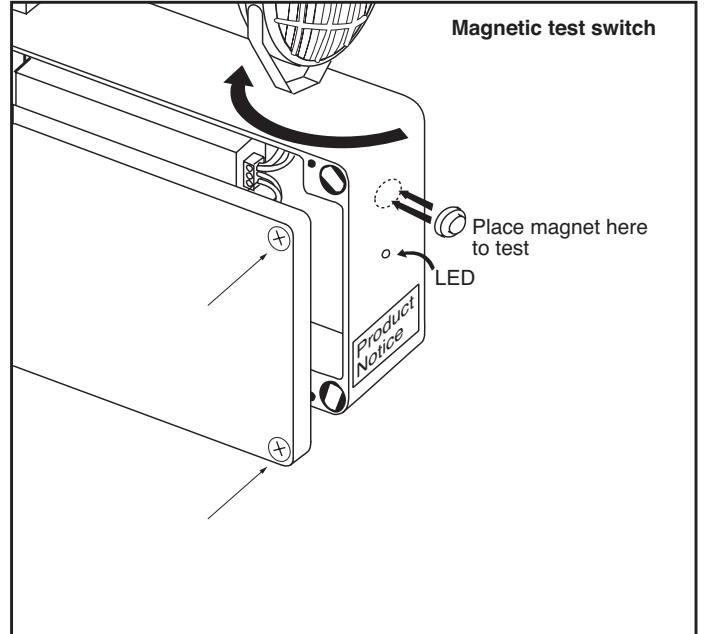

**GRP body twin head 35w floodlight**

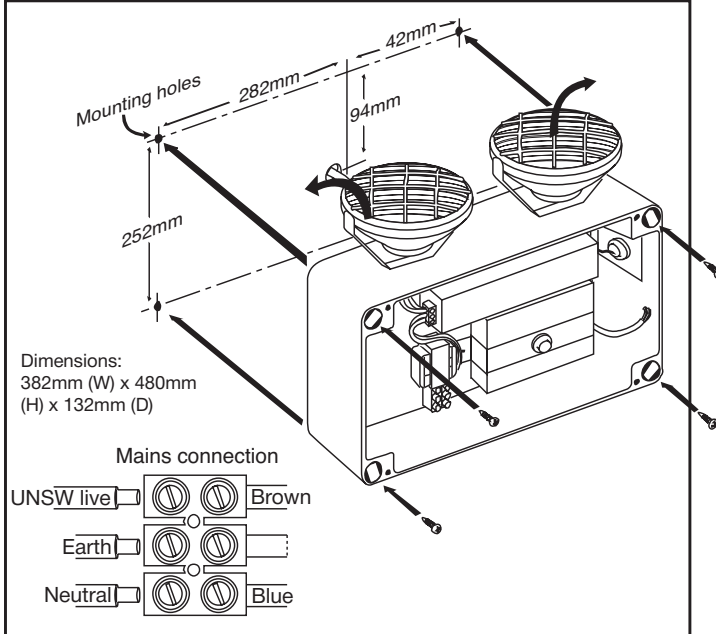

# Product Notice

## Important Notice

Legrand Australia Pty Ltd recommends and advises that only suitably qualified personnel undertake installation and maintenance of this emergency lighting unit, and that the installation complies with relevant safety and electrical standards.

## Standard - Premium Range

**Red LED:** (Indicates charging state of the battery)

LED On:	Unit on constant rate charge.
LED Off:	Indicates loss of 230v AC Power, or battery disconnection (IEC models) some incandescent units extinguish red LED if an emergency lamp fails. Red LED is also off when unit is under test.

**Installation Testing** - with the unit connected to the unswitched mains supply, check that the red charge indicator is illuminated. If not illuminated check that the supply is on, and that the battery leads in the unit are correctly connected. It is recommended that the batteries be charged for a minimum of 16 hours before a full discharge test is performed. However, checking of the emergency lamp function may be performed after 1 hour by momentarily pressing the test switch on the unit.

Where a Test Switch is not visible, the luminaire has a Magnetic Test Switch that may be activated by holding a magnetic near the label marked "Magnetic Test Switch".

Interrupting supply will Discharge Emergency Lighting Batteries. If supply remains interrupted, permanent damage to the batteries may result. Do not subject units to a high number of charge/discharge cycles as can occur on temporary (construction) power supply.

## Premium Range (dual-rate charging)

**Green LED:** (Indicates charging state of the battery)

LED Flashing slowly:	(one second On, one second Off), Unit on high rate charge.
LED On:	Fully charged; now on trickle charge.
LED Off:	Indicates loss of 230v AC Power, or battery disconnection (IEC models) some incandescent units extinguish green LED if an emergency lamp fails. Green LED is also off when unit is under test.

## AXIOM/Commander Range

**Red LED:** (Indicates charging state of the battery)

LED Flashing slowly:	(one second On, one second Off), Unit on high rate charge.
LED On:	Fully charged; now on trickle charge.
LED Off:	Indicates loss of 230v AC Power, or battery disconnection (IEC models) some incandescent units extinguish red LED if an emergency lamp fails. Red LED is also off when unit is under test.

**Green LED:** (Indicates communication status)

LED Flashing rapidly:	Self testing has found a fault within the unit. (Red LED also flashes rapidly). Green LED can also be made to flash rapidly by System commands.
LED Flashing slowly:	(one second On, one second Off), unit yet to be commissioned.
LED Off:	Communication is correct (except for short flash when the SPU is addressed by the computer).

**Inspection and Maintenance** - must be performed in accordance with AS/NZS2293 for Australian and New Zealand installations and in accordance with relevant local standards in other countries.

The batteries in this emergency lighting unit **MUST** be replaced when the unit no longer meets rated operating life.

**Warranty** - Legrand Australia Pty Ltd guarantees this emergency lighting unit for a period of 12 months from date of despatch, solely against failure arising from faulty materials or workmanship, and provided that the unit has been stored, shipped, installed, used and maintained in accordance with the manufacturers instructions and relevant standards. Misuse, negligence or modification of the unit voids all warranties. Consult Legrand Australia Pty Ltd Conditions of Sale for details on warranty liability. If this emergency lighting unit is faulty, return the unit freight pre-paid to your point of purchase, or contact Legrand Australia Pty Ltd on (61 2) 8748 0300.

**Technical Data** - for full technical or photometric data please consult Legrand Australia Pty Ltd.

**Disclaimer** - the information and advice given should be taken as a guide only.  
Both are given in good faith, and are true and correct to the best of our knowledge,  
though no guarantee of accuracy is given, and thus persons  
receiving this information should determine its suitability.



**Legrand Australia Pty Ltd**

ABN 41 000 565 739

99 St Hilliers Road, Auburn NSW 2144, Australia

Tel: (02) 8748 0300 Fax: (02) 8748 0345

www.legrand.com.au