

⚡ Wiring Diagram



? Troubleshooting

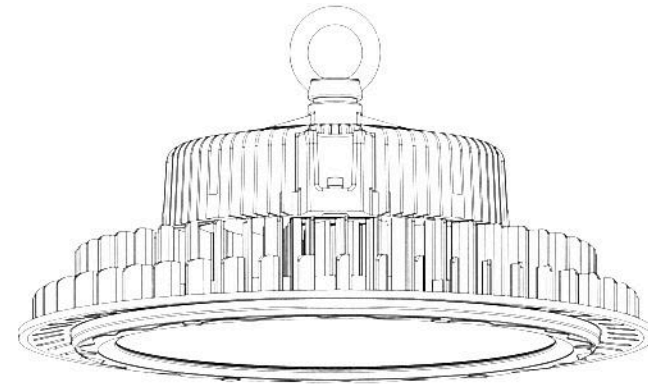
Problem	Possible Cause	Solutions
LEDs stop working	The power line is improperly connected.	Reconnect the power cable.
	The power plug is loose.	Firmly plug the power in.
	The LED driver malfunctions.	Replace with new driver.
	The LED chip is damaged.	Replace with new LEDs.
LEDs flash on and off	The output of the driver is abnormal.	Replace with new driver.
	The LED chip breaks down.	Replace with new LED chip.

☰ Warranty

5 years warranty for original purchaser of LED product that is identified on seller's invoice reflecting its original purchase (the "Product").

RX DISK LED HIGHBAY

Instruction Manual

150W/200W

Product Specifications	150W	200W
Input Voltage	230VAC	
Power Frequency	50 Hz	
CRI	Ra 70	
Beam Angle	120°	
IP Rating	IP65	
Outlook Dimensions	Ø350 x 173mm	Ø350 x 184mm
Luminaire Net Weight	4.6±0.3kg	5.2±0.3kg
System Efficacy	130(±5%) LM/W(CCT=4000K)	
Power Factor	>0.95	
Lifespan	L70/50000Hrs	
Working Temperature	-30 ~ +50°C	
Working Humidity	15% ~ 90%RH	
Storing Temperature	-40 ~ +70°C	

Technical Parameters

With unique high-purity cold forged aluminum heat sink, high-brightness SMD chips, and high-efficiency driver, the RX LED high bay is designed for factories, workshops, warehouses, gas stations, supermarkets, exhibition halls, stadiums and similar applications.

Application

1. USE ONLY AUTHORISED AND QUALIFIED ELECTRICIANS TO INSTALL LUMINAIRE.
2. Please disconnect power before installation or any maintenance of the fitting.
3. Please do not dismantle the luminaire without the supplier's authorization.
4. Please do not touch the power supply when the luminaire is operating.
5. If the external flexible cable or cord of the luminaire is damaged, it should only be replaced by the supplier, a service agent or qualified person.

Warning

We appreciate your purchase! Please read the instruction manual before installation and keep it for future reference.

Reminder

Installation Instructions

1. Use only suitably qualified electrician to install highbay luminaire.
 2. Ensure power supply is switched off.
 3. Install suspension cable or chain.
 4. Attach luminaire to suspension cable or chain using D-link or Karabiner.
 5. Plug in luminaire.
 6. Check all luminaires are functioning correctly!
 7. For Dimming-use 1-10V dimmer system.
Remove sealing cap from cable.
Connect as per attached label, using an IP65 terminal box.
- Suspension cable or welded link chain must be able to carry luminaire weight of 5kg/150W and 5.5kg/200W, cable and chain not included – supplied by others.
- Mains power cord=1.5m length.

Physical Dimensions(Unit: mm)

